

STANDARD MANUAL OF CRUBBER MAINTENANCE

SCRUBBER / LAMELLAR / MIST SEPARATOR / VENTURI SCRUBBER

EVERY MONTH / EVERY 3 MONTHS

- GAS FLOW RATE CHECK
- SPRAY NOZZLE CHECK
- DEMISTER CHECK
- MEDIA CHECK
- ph sensor check
- CLEANING AND CALIBRATION pH SENSOR
- CLEANING AND CALIBRATION CL SENSOR

EVERY 6 MONTHS

- CLEANING DEMISTER
- CLEANING SPRAY NOZZLE
- CLEANING MEDIA (FSD , FSW TYPE)
- CLEANING CIRCULATION TANK
- CLEANING ELEMENT (LAMELLAR MIST SEPARATOR)
- CLEANING FILTER & VENTURI

DUST COLLECTOR / CYCLONE

EVERY MONTH / EVERY 3 MONTHS

- AIR FILTER & REGULATOR CONTROL AIR CHECK
- ROTARY VALVE CHECK
- JET PULSE CONTROL CHECK
- DIFF. PRESSURE CHECK

EVERY 6 MONTHS

- DIAPHRAGM CHECK
- CLEANING BAG FILTER
- RUBBER SEAL CHECK
- SCREW NUT CHECK
- BAG FILTER LEAK CHECK

ACTIVATED CARBON TOWER

EVERY MONTH / EVERY 3 MONTHS

- TOWER CLEANING
- ACTIVATED CARBON CHANGE (BY CALCULATION)

MIST SEPARATOR

EVERY MONTH / EVERY 3 MONTHS

- BODY CRACK
- **EVERY 6 MONTHS**
- DEMISTER CHECK
- CLEANING DEMISTER

PUMP

EVERY MONTH / EVERY 3 MONTHS

- IMPELLER
- MEASURING TEMP., AMP, VIBRATION

EVERY YEAR

- OVERHAUL

FAN

EVERY MONTH / EVERY 3 MONTHS

- BODY/IMPELLER
- MEASURING TEMP., AMP, VIBRATION
- ADJUST V-BELT TENSION
- BEARING GREASE UP

EVERY YEAR / EVERY 2 YEARS

- V-BELT CHANGE
- V-PULLEY CHANGE
- BEARING CHANGE
- OVERHAUL



